

Prior to installation:

Deckafence wpc composite wall cladding has been designed for beauty and easy installation, it is not intended to be used as columns, support posts, beams or as other primary load-bearing members.

Before installing it is advised to unpack the wall cladding boards for 48 hours to allow them to adapt to ambient temperature conditions. Always stack the boards on a flat surface. It is not recommended to install wall cladding boards in very cold temperatures.



Installing the supports:

It is recommended that the battens used to support your Deckafence wall cladding be made from wpc composite materials, this helps to

maximize the long term performance of your

cladding. Alternatively, you can use wooden battens to support your

cladding following the same fitting process as you would for composite battens.

Battens should be fully supported once installed, it is important that the surface below the battens is flat and stable in order to give the required support.

RJHX wpc composite wall cladding boards are more flexible than hardwood boards, it is important that you get your support structure right in order to prevent problems in the future.

Battens should be attached to the surface at a maximum distance of apart. The battens will need to run the entire length of the area being additional battens at any point where you will need to join 2 cladding end.



350mm  
clad, adding in  
boards end to


Remember to install your battens at a 90 degree angle to the way that you want your wall cladding boards to run.

You will need to pre-drill the battens and the surface below using a 6mm drill bit, the battens are 25mm high and you will need to secure them at least 55mm into the surface below.



Fitting the boards:

Attach a starter clip to the bottom of each joist, this will give the first cladding board something to sit on.

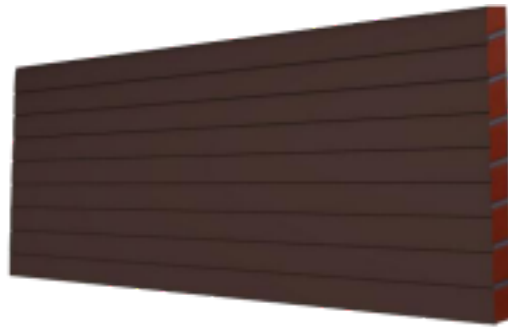

You will need to pre-drill a pilot hole into the composite joist and attach the starter clip using a screw that is at least 15mm long.

Ensure that each clip is level with the next and that the first board sits level on the clips before continuing to the next step.

Place the first wall cladding board on to the starter clips. Mark and then pre-drill pilot holes through the fixing groove of the board into the composite joist below.

Secure the boards using a screw at least 20mm in length, ensuring that the board is fastened securely on each joist that it touches. Secure these fixings by hand, it is important not to over-tighten the screws and risk splitting the board.

Ensure that the section between the joists remains empty allowing air to flow beneath the boards.

Slot the second board onto the first and repeat the fixing process ensuring that the second board is fitted securely in place on each joist.

Repeat the process with each board until you reach the required height.

Continue to fit the cladding boards in this manner until you have completely covered the area you want. It is possible to fit your boards side by side in a brickwork pattern. You may need to install more joist if you wish to do this as each board will need to be supported on a joist where it meets the next board.

Finishing touches:

Depending on your installation you may want to finish off the edges using one of the trims Deckafence can provide to give you a lasting professional look.



There are a range of trims available in all colours to compliment your cladding boards and these can be secured to your installation by screwing through the trim into the joist below every 300mm. Do not screw through wall cladding boards.

Alternatively, if it is not possible to fix the trim to the joist without screwing through the wall cladding board you can silicon them in place using an exterior grade high elastic glue.

Do not completely seal your installation, allow some air to flow between the cladding boards and the surface below when fitting the trims.

